

5915031 JAN 2009

MANUFACTURER'S STATEMENT

Read this operation manual carefully before use to ensure proper operation of the sensor. Failure to read this operation manual may cause improper sensor operation and may result in serious injury or death of person. The meanings of the symbols are as follows. Please study the following first and then read the contents of this operation manual.

WARNING	Disregard of warning may cause the improper operation causing death or serious injury of person.
CAUTION	Disregard of caution may cause the improper operation causing injury of person or damage to objects.
NOTE	Special attention is required to the section of this symbol.

NOTE

- This sensor is a non-contact switch intended for header mount / wall mount of an automatic door. Do not use for any other applications. This sensor cannot be used for industrial doors or shutters, when used, proper operation and safety cannot be guaranteed.
- When setting the sensor's detection area, make sure there is no traffic around the installation site.
- Before turning the power on, check the wiring to prevent damage or malfunction of equipments that are connected to the sensor.
- Only use the sensor as specified in the operation manual provided.
- Be sure to install the sensor in accordance with the local laws and standards of the country in which the sensor is installed.
- Before leaving the job site make sure that the sensor is operating properly and instruct the building owner/operator on proper operation of the door and the sensor.
- The sensor setting can only be changed by an installer or service engineer. When changed, register the changed setting and dates in the maintenance logbook accompanying the door.



WARNING	Do not wash, disassemble, rebuild or repair the sensor, otherwise it may cause electric shock or breakdown of equipments.
Danger of electric shock.	

SPECIFICATIONS


Model	: OA-AXIS I / OA-AXIS II	Output	: OA-AXIS I / Form C relay
Cover color	: Silver / Black		50V 0.3A Max. (Resistance load)
Mounting height	: 2.0 (6'7") to 3.5m (11'5")		OA-AXIS II / 1st to 3rd rows / Form C relay
Detection area	: See DETECTION AREA		50V 0.3A Max. (Resistance load)
Detection method	: Active Infrared Reflection		3rd to 5th rows / Form C relay
Depth angle adjustment	: 1st to 3rd rows / -6° to +6° 4th and 5th rows / +26° to +44°		50V 0.3A Max. (Resistance load)
Power supply	: 12 to 24VAC(±10%) 12 to 30VDC(±10%)	Output hold time	: Approx. 0.5 sec.
Power consumption	: OA-AXIS I < 3VA OA-AXIS II < 4VA	Response time	: <0.3 sec.
Operation LED	: Green / Stand-by Blinking Red / 1st row detection Red / 2nd row detection Orange / 3rd to 5th rows detection	Operating temperature	: -20 to +55°C(-4 to 131°F)
		IP rate	: IP44
		Weight	: 320g (11.2oz)
		Accessories	: 1 Cable 3m (9'10") 1 Operation manual 2 Mounting screws 1 Mounting template 1 Area adjustment tool

NOTE The specifications herein are subject to change without prior notice due to improvements.

OUTER DIMENSIONS AND PART NAMES

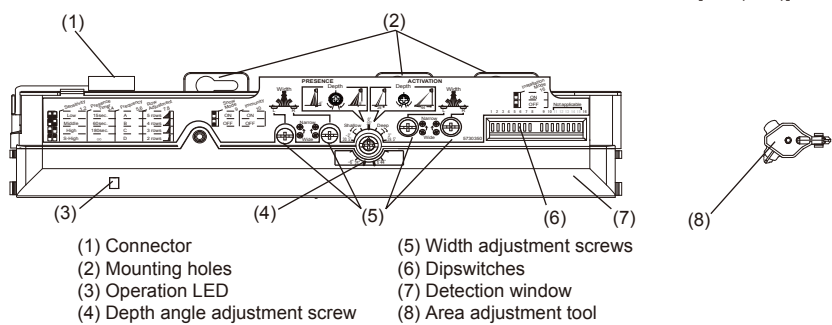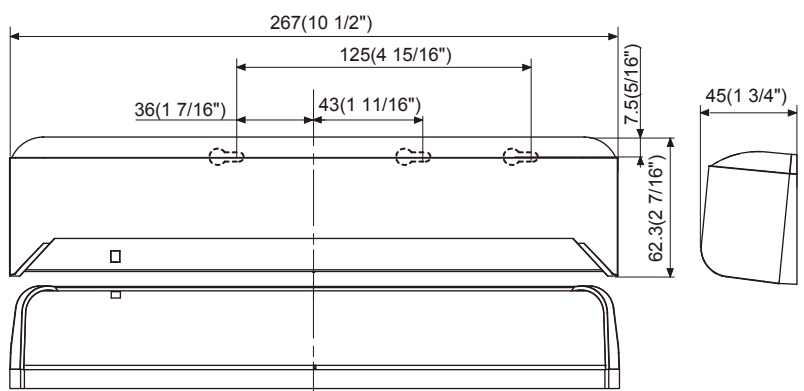

DETECTION AREA

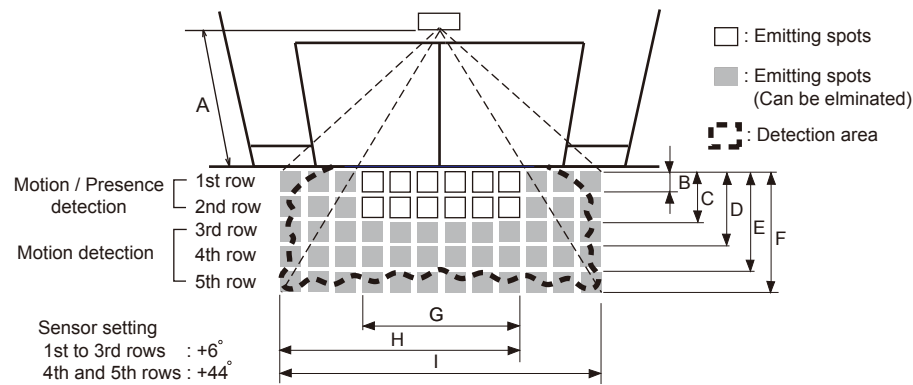

	[m(feet,inch)]				
A	2.20(7'2 5/8")	2.50(8'2 7/16")	2.70(8'10 5/16")	3.00(9'10 1/8")	3.50(11'5 13/16")
B	0.14(5 1/2")	0.16(6 5/16")	0.18(7 1/16")	0.20(7 7/8")	0.23(9 1/16")
C	0.42(1'4 9/16")	0.48(1'6 7/8")	0.52(1'8 1/8")	0.58(1'10 13/16")	0.67(2'2 3/8")
D	0.82(2'8 5/16")	0.93(3' 5/8")	1.00(3'3 3/8")	1.10(3'7 5/16")	1.30(4'3 3/16")
E	1.35(4'5 1/8")	1.54(5' 5/8")	1.66(5'5 3/8")	1.85(6' 13/16")	2.16(7'1 1/16")
F	1.90(6'2 13/16")	2.17(7'1 7/16")	2.34(7'8 1/8")	2.60(8'6 3/8")	3.03(9'11 5/16")
G	1.33(4'4 3/8")	1.51(4'11 7/16")	1.63(5'4 3/16")	1.81(5'11 1/4")	2.11(6'11 1/16")
H	2.05(6'8 11/16")	2.32(7'7 5/16")	2.51(8'2 13/16")	2.79(9'1 13/16")	3.26(10'8 3/8")
I	2.78(9'1 7/16")	3.15(10'4")	3.40(11'1 7/8")	3.79(12'5 3/16")	4.42(14'6")


NOTE The actual detection area may become smaller depending on the ambient light, the color / material of the object or the floor as well as the entry speed of the object.

*The values of the chart above is of the emitting spots, but not of the detection area.


INSTALLATION

NOTE The following conditions are not suitable for the sensor installation.

- Fog or exhaust emission around the door.
- Wet floor
- Vibrating header or mounting surface.
- Moving objects or a heating radiator in the detection area.
- Highly reflecting floor or the presence of highly reflecting objects around the door.

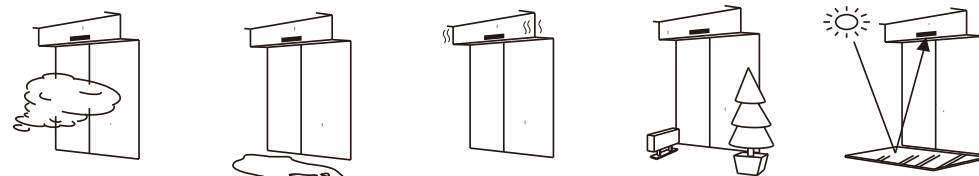

- Affix the mounting template at the desired mounting position.
- Drill two mounting holes of ø3.4mm (ø1/8").
- To pass the cable through to the header, drill a wiring hole of ø8mm (ø5/16").
- Remove the mounting template.
- Remove the housing cover. Attach the sensor to the mounting surface with two mounting screws.

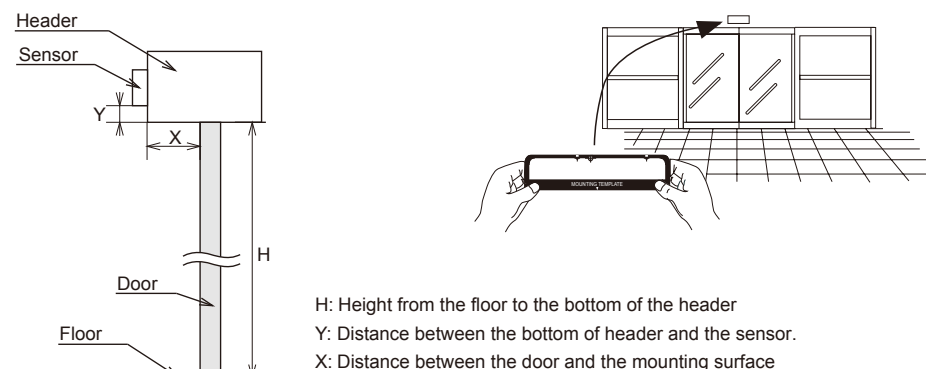

Maximum mounting distance (Y) [mm(feet,inch)]

X	H	2,000 (6' 6")	2,200 (7' 2")	2,500 (8' 2")	3,000 (9' 10")
0		No limit			
50 (1 15/16")		200 (7 7/8")	200 (7 7/8")	200 (7 7/8")	200 (7 7/8")
100 (3 15/16")		200 (7 7/8")	200 (7 7/8")	200 (7 7/8")	200 (7 7/8")
150 (5 7/8")		130 (5 1/8")	150 (5 7/8")	170 (6 11/16")	200 (7 7/8")
200 (7 7/8")		-	110 (4 5/16")	130 (5 1/8")	150 (5 7/8")
250 (9 13/16")		-	-	-	120 (4 3/4")
300 (11 13/16")		-	-	-	-

CAUTION	Make sure to affix the mounting template as described in the above chart. Otherwise, it can be dangerous since there may be no presence detection area around the threshold. Install the sensor as low as possible on the header.
Risk of getting caught.	

NOTE The sensor mounting position may be limited depending on the header thickness and the mounting height.

- Wire the cable to the door controller properly as shown in the drawing below.

OA-AXIS I



Grey	Power supply
Grey	12 to 24VAC ±10%
Grey	12 to 30VDC ±10%
White	Common (COM.)
Yellow	Normally open (N.O.)
Green	Normally closed (N.C.)

OA-AXIS II



Grey	Power supply	
Grey	12 to 24VAC ±10%	
Grey	12 to 30VDC ±10%	
White	Common (COM.)	
Yellow	Normally open (N.O.)	3rd to 5th * rows output
Green	Normally closed (N.C.)	
White Str.	Common (COM.)	1st to 3rd * rows output
Yellow Str.	Normally open (N.O.)	
Green Str.	Normally closed (N.C.)	

*The outputs from the 3rd row overlaps.

WARNING	Before starting the procedure, ensure that the power is turned OFF. When passing through the cable to the hole, make sure not to tear the shield, otherwise it may cause electric shock or breakdown of the sensor.
Danger of electric shock.	

- Plug the connector of the sensor.
- Supply power to the sensor. Adjust the detection area and set the dipswitches. (See ADJUSTMENTS)


NOTE Make sure to connect the cable correctly to the door controller before turning the power ON. To enable the presence detection, do not enter the detection area for 10 seconds after supplying the power.

- Place the housing cover. If wiring is to be exposed, break the knockout.

WARNING	Do not use the sensor without the cover. When using the cable knockout, install the sensor indoors or use the rain-cover (Separately available) otherwise electric shock or breakdown of the sensor may occur.
Danger of electric shock.	


ADJUSTMENTS

1 Area depth angle adjustment

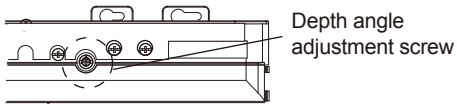

The detection area depth can be changed by the area adjustment tool.

When adjusting the 1st to 3rd rows close to the door, follow 3-7 Installation mode.

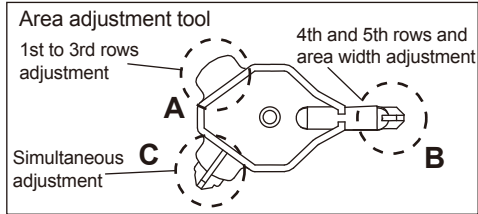

1-1. Independent adjustment

1st to 3rd rows

Depth angle adjustment screw for 1st to 3rd rows




Use the area adjustment tool (A) as shown above and change the depth of the detection area by turning the depth angle adjustment screw.

4th and 5th rows

Depth angle adjustment screw for 4th and 5th rows



Use the area adjustment tool (B) as shown above and change the depth of the detection area by turning the depth angle adjustment screw.

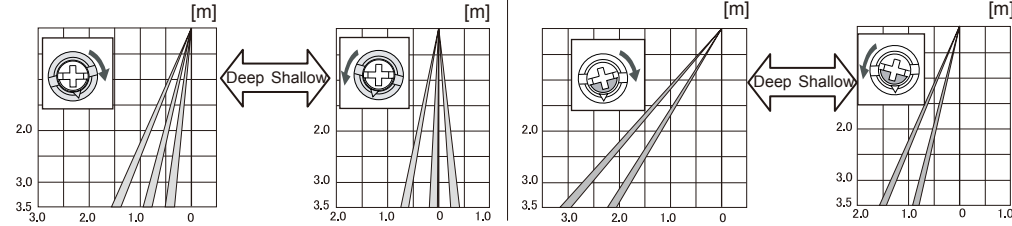


Check the area position with Red LED of the Operation LED using a tool such as a reflecting mirror.

NOTE Make sure the detection area does not overlap with the door / header, otherwise ghosting / signal saturation may occur. Do not place any highly reflecting objects in the detection area, otherwise signal saturation may occur.

REFERENCE Area depth adjustment with INFRARED FINDER (Separately available)

- Turn the depth adjustment screw to the right (Deep) to place the area most away from the door.
- Set INFRARED FINDER sensitivity to "H" (High) and place it on the floor as shown below.

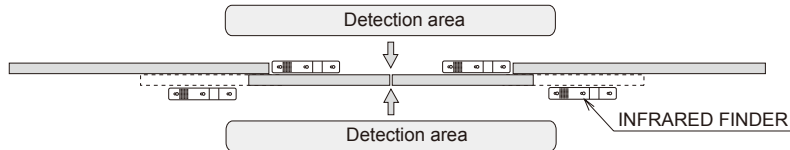

- Turn the depth adjustment screw to the left (Shallow) until the emitting area is placed at the position where INFRARED FINDER is in the low detection status (Slow Red blinking).

1-2. Simultaneous adjustment

For the simultaneous adjustment of 1st to 5th rows, use the adjustment tool (C).

2 Width detection area adjustment

1st to 3rd rows


Eliminated 1-3, 10-12




Width adjustment screw (Left)

4th and 5th rows

Eliminated 1-3, 10-12




Width adjustment screw (Right)

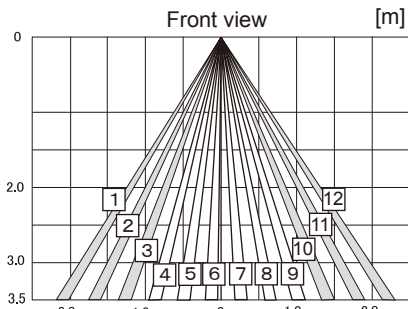

NOTE The actual detection area may become smaller depending on the ambient light, the color / material of the object and the floor as well as the entry speed of the object.

3 Dipswitch settings



- 1,2 : Sensitivity
- 3,4 : Presence detection timer
- 5,6 : Frequency
- 7,8 : Row adjustment
- 9 : Snow mode
- 10 : Immunity
- 11 to 15 : Not applicable
- 16 : Installation mode

3-1 Setting the sensitivity

Normally set to "Middle". "Low" decreases the sensitivity and "High / S-High" increases the sensitivity.




3-2 Setting the presence detection timer

The 1st and 2nd rows have the presence detection function. The presence detection timer can be selected from 4 settings.




3-3 Setting the frequency

When using more than two sensors close to each other, set the different frequency for each sensor by combining dipswitch 5 and 6.



3-4 Setting the area depth

The 5th, 4th, and 3rd rows can be eliminated by combining dipswitches 7 and 8.

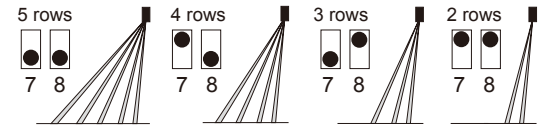


*When 2 rows setting is selected, only the presence detection area remains.

NOTE Always check the area according to the expected entry speed and determine the appropriate number of rows. When setting motion and motion / presence detection area separately, make sure that there is no gap between two areas.


3-5 Setting the snow mode

Set this switch to ON, if the sensor is used in a region with snow.



3-6 Setting the immunity


Set this switch to ON, when less influence by the header vibration is required.



3-7 Installation mode

Use this switch to ON when adjusting the presence detection area close to the door face.

- * During the installation mode, only the 1st row remain.
- * Door open state
- * Operation LED glows yellow.



CHECKING

Check the operation according to the chart below.

- ① White : COM.
- ② Yellow : N.O.
- ③ Green : N.C.
- ④ White Str. : COM.
- ⑤ Yellow Str. : N.O.
- ⑥ Green Str. : N.C.

Entry	Power off	Outside of detection area	Entry into 4th or 5th row	Entry into 3rd row	Entry into 2nd row	Entry into 1st row
Status	-	Stand-by	Motion detection active	Motion/Presence detection active	Presence detection	
Operation LED	None	Green	Orange		Red	Blinking Red
OA-AXIS I	Output	① ② ③	① ② ③	① ② ③		
OA-AXIS II	Output from 1st to 3rd rows*	④ ⑤ ⑥	④ ⑤ ⑥	④ ⑤ ⑥		
	Output from 3rd to 5th rows*	① ② ③	① ② ③	① ② ③	① ② ③	

*The outputs from the 3rd row overlaps.

INFORM BUILDING OWNER / OPERATOR OF THE FOLLOWING ITEMS

WARNING

- Always keep the detection window clean. If dirty, wipe the window lightly with a damp cloth. (Do not use any cleaner or solvent.)
- Do not wash the sensor with water.
- Do not disassemble, rebuild or repair the sensor yourself, otherwise electric shock may occur.
- When an operation LED blinks green, contact your installer or service engineer.
- Always contact your installer or service engineer when changing the settings.
- Do not paint the detection window.

NOTE

- When turning the power on, always walk-test the detection area to ensure proper operation.
- Do not place any objects that move or emit light in the detection area. (e.g. Plant, illumination, etc.)

TROUBLESHOOTING

Problem	Operation LED	Possible cause	Possible countermeasures
Door does not open when a person enters the detection area.	None	Power supply voltage. Wrong wiring or connection failure.	Set to the stated voltage. Check the wires and connector.
	Unstable	Wrong detection area positioning.	Check ADJUSTMENTS 1 & 2 .
		Sensitivity is too low.	Set the sensitivity higher.
		Short presence detection timer.	Set the presence detection timer longer.
		Dirty detection window.	Wipe the detection window with a damp cloth. (Do not use any cleaner or solvent.)
Door opens when no one is in the detection area. (Ghosting)	Unstable	Vibration of the header.	Set the sensitivity lower or the immunity to ON.
		Water drops on the detection window.	Use the rain-cover (Separately available). Or install in a place keeping the waterdrops off.
		The detection area overlaps with that of another sensor.	Check ADJUSTMENTS 3-3 .
		The detection area overlaps with the door / header.	Adjust the detection area to "Deep" (Outside).
		Reflecting objects in the detection area. Or reflecting light on the floor.	Remove the objects.
		Sensitivity is too high.	Set the sensitivity lower.
		It snows and pours.	Set the snow mode to ON.
		Objects that move or emit light in the detection area. (Ex. Plant, illumination, etc.)	Remove the objects.
		Wet floor.	Check the installation condition referring to INSTALLATION on the reverse side.
		The exhaust emission or fog penetrate into the detection area.	
Door remains open	Red or Orange	Sudden change in the detection area.	Check ADJUSTMENTS 3-1 & 3-2 . If the problem still persists, hard-reset the sensor. (Turn the power OFF and ON again.)
	Proper	Wrong wiring or connection failure.	Check the wires and connector.
	Twice Green blinking	The relay is reaching the end of its life cycle.	Contact your installer or the sales engineer.
	Slow Green blinking	Signal saturation	Remove highly reflecting objects from the detection area. Or lower the sensitivity. Or change the area angle.
The detection area overlaps with the door / header.		Adjust the detection area to "Deep" (Outside).	
Door remains closed	Proper	Wrong wiring or connection failure.	Check the wires and connector.

OPTEX CO.,LTD.

5-8-12 Ogoto Otsu 520-0101, Japan
TEL.: +81 (0)77-579-8700
FAX.: +81 (0)77-579-7030
WEBSITE: www.optex.co.jp

OPTEX Technologies Inc.

3882 Del Amo Blvd., Suite 604
Torrance, CA 90503 U.S.A.
TEL.: +1 (310) 214-8644
FAX.: +1 (310) 214-8655
TOLL-FREE: 800-877-6656
WEBSITE: www.optextechnologies.com

OPTEX Technologies B.V.

Tiber 2, 2491 DH The Hague,
The Netherlands
TEL.: +31 (0)70-419-41-00
FAX.: +31 (0)70-317-73-21
E-MAIL: info@optex.nl
WEBSITE: www.optex.nl



OA-AXIS T



5921880 JUN 2014

NIM-0035-1 Original instructions

MANUFACTURER'S STATEMENT

Read this operation manual carefully before use to ensure proper operation of this product. Failure to read this operation manual may cause improper operation and may result in serious injury or death of a person. The meanings of the symbols are as follows.

	WARNING Disregard of warning may cause the improper operation causing death or serious injury of a person.
	CAUTION Disregard of caution may cause the improper operation causing injury of a person or damage to objects.
	NOTE Special attention is required to the section of this symbol.
	It is required to check the operation manual if this symbol is shown on the product.

- NOTE**
- This product is a non-contact switch intended for header mount or wall mount for use on an automatic sliding door. Do not use for any other applications.
 - When setting the sensor's detection area, make sure that there is no traffic around the installation site.
 - Before turning the power ON, check the wiring to prevent damage or malfunction of equipment connected to the product.
 - Only use the product as specified in the operation manual provided.
 - Be sure to install and adjust the sensor in accordance with the local laws and standards of the country in which the product is installed.
 - Before leaving the installation site make sure that the product is operating properly and instruct the building owner/operator on proper operation of the door and the product.
 - The product settings can only be changed by an installer or service engineer. When changed, the changed settings and the date shall be registered in the maintenance logbook accompanying the door.

	WARNING Do not wash, disassemble, rebuild or repair the sensor, otherwise it may cause electric shock or breakdown of the equipment.
Danger of electric shock.	

- NOTE** The following conditions are not suitable for sensor installation.
- Fog or exhaust emission around the door.
 - Wet floor.
 - Vibrating header or mounting surface.
 - Moving objects or objects that emit light near the detection area.
 - Highly reflecting floor or highly reflecting objects around the door.



SPECIFICATIONS

Model	: OA-AXIS T	Activation output	: When 3rd, 4th or 5th row detects. Form A relay 50V 0.3A Max. (Resistance load)
Cover color	: Silver / Black	Operating temperature	: -20 to +55°C (-4 to 131°F)
Mounting height	: 2.0 (6'7") to 3.0m (9'10")	Operating humidity	: <80%
Detection area	: See DETECTION AREA	Noise level	: <70dBA
Detection method	: Active infrared reflection (*1)	Output hold time	: <0.5 sec.
Depth angle adjustment	: 1st to 3rd rows / -6 to +6° 4th and 5th rows / +26 to +44°	Response time	: <0.3 sec.
Power supply (*2)	: 12 to 24VAC ±10% (50 / 60 Hz) 12 to 30VDC ±10%	IP rate	: IP54
Power consumption	: < 2.5W (< 4VA at AC)	Category	: 2 (EN ISO 13849-1 : 2008)
Operation indicator	: See chart below	Performance level	: d (EN ISO 13849-1 : 2008)
Safety input	: Opto coupler Voltage / 5 to 30VDC Current / 6mA Max. (30VDC)	ESPE	: Type2
Safety output	: When 1st or 2nd row detects. Opto coupler (NPN) Voltage / 5 to 50VDC Current / 100mA Max. Dark current / 600nA Max. (Resistance load)	Weight	: 320g (11.2oz.)
		Accessories	: 1 Operation manual 2 Mounting screws 1 Mounting template 1 Area adjustment tool 1 Cable 3m (9'10") (8 x 0.22mm ² AWG24) (*3)


- *1 : The 1st and 2nd rows have presence detection function.
*2 : When using this sensor, the sensor has to be connected to a door system which has the SELV circuit.
*3 : Overcurrent protection with less than 2A.

Operation indicator

Status	Operation indicator color	Indicator Pattern
Stand-by (Installation mode)	Yellow	Steady Yellow
Stand-by (Operation mode)	Green	Steady Green
1st row detection	Blinking Red	Blinking Red
2nd row detection	Red	Steady Red
3rd, 4th or 5th row detection	Orange	Steady Orange
Setting error	Red & Green Blinking	Blinking Red & Green
Signal saturation	Slow Green Blinking	Slow Blinking Green
Sensor failure	Fast Green Blinking	Fast Blinking Green

NOTE The specifications herein are subject to change without prior notice due to improvements.

OUTER DIMENSIONS AND PART NAMES

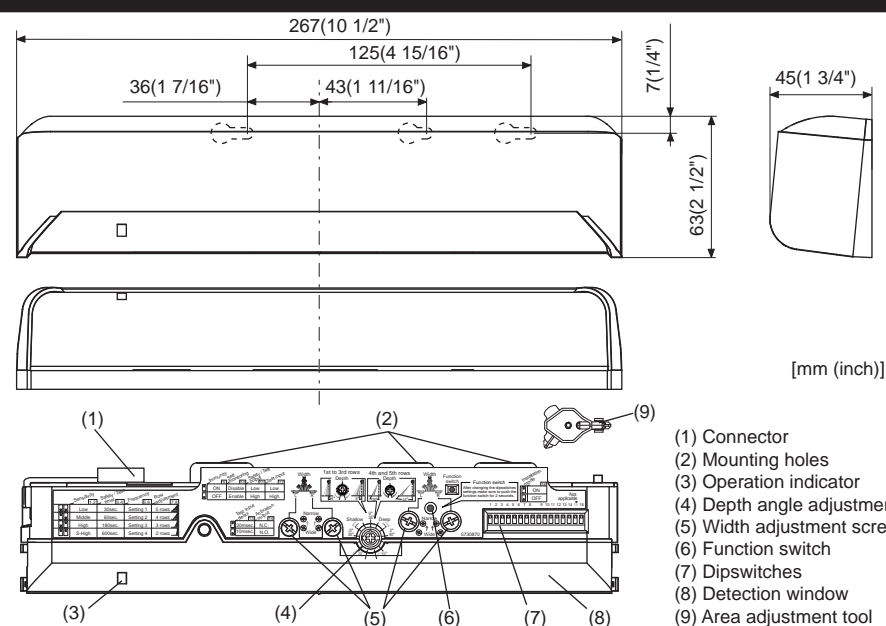

COMPLIED STANDARDS AND EXTRACT FROM EC DECLARATION OF CONFORMITY


EN 16005:2012 Chapter 4.6.8 and Annex C	EN 12978:2003 +A1:2009	Machinery Directive 2006/42/EC
EMC Directive 2004/108/EC	EN ISO 13849-1:2008	EN ISO 13849-2:2012
EN 61496-3:2001 clause 4. 3. 5 and 5. 4. 7. 3	EN 61000-6-2:2005	EN 61000-6-3:2007 +A1:2011

Notified Body 0044 : TÜV NORD CERT GmbH Langemarckstr. 20 45141 Essen Germany
EC-type examination certificate No. 44 205 13 099205

Technical documentation see manufacture address

A. Maekawa
General Manager
OPTEX CO., LTD.
Quality Control Dept.

DETECTION AREA

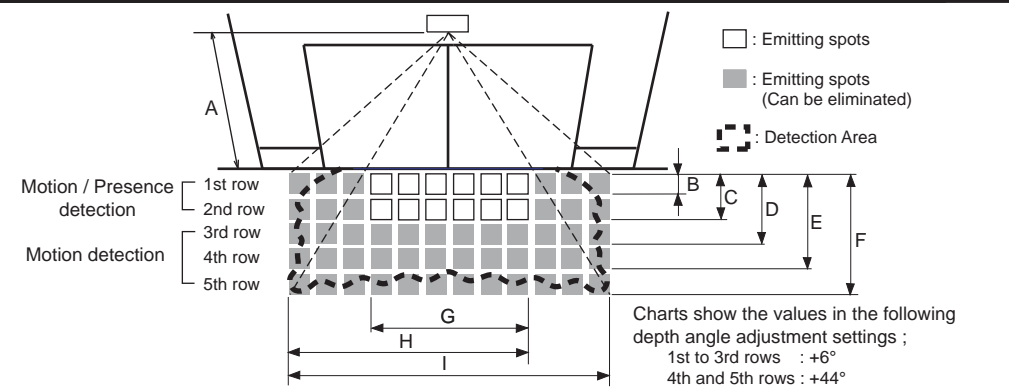

Emitting area

	2.00 (6'7")	2.20 (7'3")	2.50 (8'2")	2.70 (8'10")	3.00 (9'10")
A	2.00 (6'7")	2.20 (7'3")	2.50 (8'2")	2.70 (8'10")	3.00 (9'10")
B	0.13 (5")	0.14 (6")	0.16 (6")	0.18 (7")	0.20 (8")
C	0.38 (1'3")	0.42 (1'5")	0.48 (1'7")	0.52 (1'8")	0.58 (1'11")
D	0.74 (2'5")	0.82 (2'8")	0.93 (3'1")	1.00 (3'3")	1.10 (3'7")
E	1.23 (4")	1.35 (4'5")	1.54 (5'1")	1.66 (5'5")	1.85 (6'1")
F	1.74 (5'9")	1.90 (6'3")	2.17 (7'1")	2.34 (7'8")	2.60 (8'6")
G	1.06 (3'6")	1.33 (4'4")	1.51 (4'11")	1.63 (5'4")	1.81 (5'11")
H	1.86 (6'1")	2.05 (6'9")	2.32 (7'7")	2.51 (8'3")	2.79 (9'2")
I (*)	2.52 (8'3")	2.78 (9'1")	3.15 (10'4")	3.40 (11'2")	3.79 (12'5")
X	0.19 (7")	0.21 (8")	0.24 (9")	0.26 (10")	0.28 (11")

X is the distance between the 1st row and the mounting surface.

Detection area

To comply with EN 16005, make sure that the detection area is within the values in the chart below.

	2.00 (6'7")	2.20 (7'3")
A	2.00 (6'7")	2.20 (7'3")
C	0.23 (9")	0.24 (9")
G	1.02 (3'4")	1.10 (3'7")
I	2.41 (7'11")	2.54 (8'4")

Test conditions required by EN 16005
Floor : Grey paper
Detection object : EN 16005 CA reference body
Sensitivity : Middle
Speed of detection object : 50mm / sec.

The values above are those of the **Detection area** when tested referring to the test conditions of EN 16005.


(The emitting area is as shown in **Emitting area** above.)

*: When installed at higher than 2.35m(7'9"), EN 16005 requirements are fulfilled only within the area width "I" of 3m(9'10").

- NOTE** The actual detection area may become smaller depending on the ambient light, the color / material of the object or the floor as well as the entry speed of the object.
The sensor may not be activated when the entering speed of the object or a person is slower than 50mm / sec. or faster than 1500mm / sec.

INSTALLATION

- Affix the mounting template at the desired mounting position.
(When setting the detection area close to the door, mount the sensor according to the chart below.)
- Drill two mounting holes of ø3.4mm (ø1/8").
- To pass the cable through the header, drill a wiring hole of ø8mm (ø5/16").
- Remove the mounting template.
- Remove the housing cover. Fix the sensor to the mounting surface with the two mounting screws.

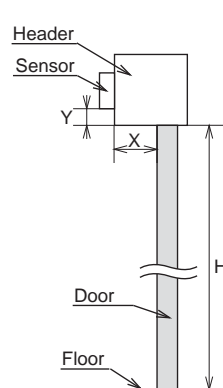

H : Height from the floor to the bottom of the header
(The mounting height is "H + Y".)
Y : Distance between the bottom of the header and the sensor
X : Distance between the door and the mounting surface

X	H	2.00 (6'7")	2.30 (7'7")	2.50 (8'2")	2.80 (9'2")	3.00 (9'10")
0		No limit				
0.05 (2")		0.20 (8")	0.20 (8")	0.20 (8")	0.20 (8")	0
0.10 (4")		0.20 (8")	0.20 (8")	0.20 (8")	0.20 (8")	0
0.15 (6")		0.13 (5")	0.15 (6")	0.19 (7")	0.20 (8")	0
0.20 (8")		-	0.12 (5")	0.14 (6")	0.15 (6")	0
0.25 (10")		-	-	0.11 (4")	0.12 (5")	0
0.30 (12")		-	-	-	-	-

NOTE Make sure not to mount the sensor lower than the bottom of header.

	CAUTION Risk of getting caught.	Make sure to affix the mounting template as described in the above chart , otherwise it can be dangerous since there may be no detection area around the threshold. Install the sensor as low as possible on the header.
--	---	--

2

To the connector of the sensor	1.White 2.Brown 3.Green 4.Yellow 5.Pink (+) 6.Blue (-) 7.Red (+) 8.Black (-)	Power supply 12 to 24VAC±10% / 12 to 30VDC±10%
		Activation output Form A relay 50V 0.3A Max.
		Safety output Opto coupler(NPN) / Voltage: 5 to 50VDC
		Safety input Opto coupler / Voltage: 5 to 30VDC

	WARNING Danger of electric shock.	Before starting the procedure, make sure that the power is turned OFF. When passing the cable through the hole, do not tear the shield. otherwise it may cause electric shock or breakdown of the sensor.
--	---	---

3

- Plug the connector of the sensor.
- Supply power to the sensor. Adjust the detection area and set the dipswitches. (See **ADJUSTMENTS**)

NOTE Make sure to connect the cable correctly to the door controller before turning the power ON. When turning the power ON or after adjusting the settings, do not enter the detection area for more than 10 seconds in order to enable the presence detection. Do not touch the dipswitches before turning the power ON, otherwise an error occurs. When changing the settings of dipswitch, see **ADJUSTMENTS 3 Dipswitch settings**.


4

- Place the housing cover.
If wiring is to be exposed, break the knockout.

	WARNING Danger of electric shock.	Do not use the sensor without the cover. When using the cable knockout, install the sensor indoors or use the rain-cover (Separately available) otherwise electric shock or breakdown of the sensor may occur.
--	---	--

ADJUSTMENTS


1 Area depth angle adjustment



When adjusting the 1st row close to the door, see 3-11 Installation mode for the easier adjustment.

NOTE Make sure that the detection area does not overlap with the door/header, and there is no highly reflecting object near the detection area otherwise ghosting/signal saturation may occur.

Area adjustment tool

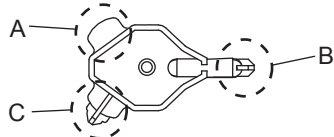


1-1.Independent adjustment

1st to 3rd rows

Depth angle adjustment screw for the 1st to 3rd rows



Use the area adjustment tool (A) as shown above to change the area depth angle for the 1st to 3rd rows.

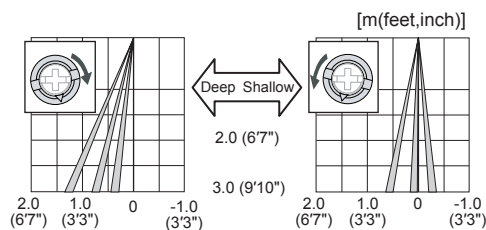


4th and 5th rows

Depth angle adjustment screw for the 4th and 5th rows



Use the area adjustment tool (B) as shown above to change the area depth angle for the 4th and 5th rows.

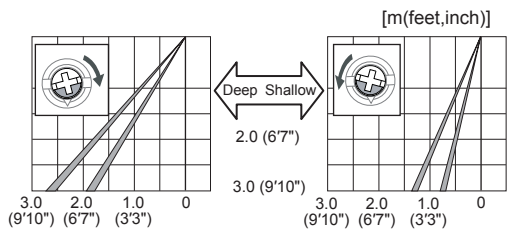


1-2.Simultaneous adjustment

For the simultaneous adjustment of the 1st to 5th rows, use the adjustment tool (C).

REFERENCE Area depth adjustment with INFRARED FINDER (Separately available)


- Turn the depth angle adjustment screw to the right (Deep) to place the detection area most away from the door.
- Set INFRARED FINDER sensitivity to "H" (High) and place it on the floor as shown below.

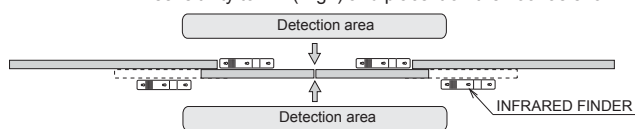



- Turn the depth angle adjustment screw to the left (Shallow) until the emitting area is placed at the position where INFRARED FINDER is in the low detection status (Slow Red Blinking).

2 Area width adjustment

1st to 3rd rows

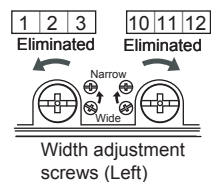


4th and 5th rows

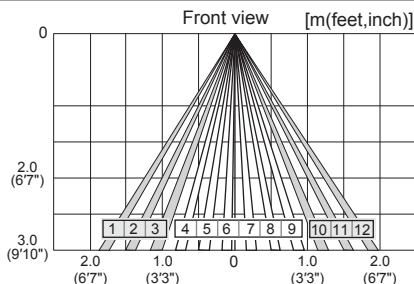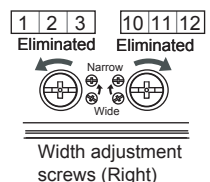

NOTE When adjusting the width adjustment screws, make sure to turn until it clicks otherwise the proper operation may not be obtained.
 1 2 3 cannot be eliminated separately, neither can 10 11 12.


3 Dipswitch settings

After changing the dipswitch settings, make sure to push the function switch for 2 seconds.

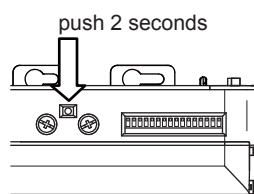

3-1.Setting the sensitivity

Refer to the chart below for the suitable sensitivity to your installation environment.



		Mounting height [m (feet,inch)]				For example
		2.0 (6'7")	2.2 (7'3")	2.5 (8'2")	3.0 (9'10")	
Floor condition	Low reflection	Middle	Middle	High	S-High	-Carpet -Dark color floor
	Middle reflection	Low	Middle	Middle	S-High	-Concrete
	High reflection	Low	Low	Middle	High	-Tile -Marble

NOTE Special attention to the setting is required when the door is used often by the elderly or children. Please adjust the sensitivity and the presence detection timer according to your risk assessment.

3-2.Setting the presence timer


The 1st and 2nd rows have the presence detection function.



NOTE To enable the presence detection, do not enter the detection area for 10 seconds after setting the timer.

3-3.Setting the frequency


When using more than two sensors close to each other, set the different frequency for each sensor by dipswitches 5 and 6.



3-4.Setting the row adjustment

Set the depth rows with dipswitches 7 and 8.


NOTE When "2rows" are selected, the activation output is disabled.

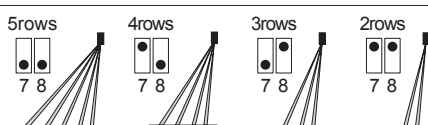

3-5.Setting the immunity


Set dipswitch 9 to "ON" when the sensor operates by itself (Ghosting).

NOTE When dipswitch 9 is set to "ON", the actual detection area may become smaller.



3-6.Setting the self monitoring

When the door remains open and the LED indicator shows fast or slow green blinking, please refer to the TROUBLESHOOTING. If the door still remains open, set dipswitch 10 to "Disable".



NOTE To comply with EN 16005, dipswitch 10 must be set to "Enable".

3-7.Setting the Safety output (to door controller)

Dipswitch11 is for the Safety output (to door controller).



3-8.Setting the Safety input (from door controller)

Dipswitch12 is for the Safety input (from door controller).



NOTE The delay time between Safety input and Safety output is 10msec..

3-9.Settings the direction recognition

When Dipswitch13 is set to "Uni", uni-directional function is activated.


This function enables the door to close faster if a person walks away from the door.



NOTE Uni-directional function is disabled in case the detection at 1st and/or 2nd row continues for more than 5sec..

3-10.Setting the Activation output


Dipswitch14 is for the Activation output to door controller.



3-11.Installation mode

Set dipswitch 16 to "ON" to adjust the 1st row.

During the Installation mode only the 1st row remains active and the operation indicator shows yellow. After setting the row set dipswitch 16 "OFF".



CHECKING

Check the operation in the operation mode according to the chart below.

Entry	Power OFF	Outside of detection area	Entry into 3rd to 5th row	Entry into 2nd row	Entry into 1st row	Outside of detection area
Status	-	Stand-by	Motion detection active	Motion / Presence detection active		Stand-by
Operation indicator	None	Green	Orange	Red	Blinking Red	Green
Activation output	14 N.O.	—	—	—	—	—
	14 N.C.	—	—	—	—	—
Safety output	11 High	OFF	ON	OFF	ON	OFF
	11 Low	OFF	OFF	ON	OFF	ON

INFORM BUILDING OWNER / OPERATOR OF THE FOLLOWING ITEMS

WARNING

- Always keep the detection window clean. If dirty, wipe the window with a damp cloth. (Do not use any cleaner / solvent.)
- Do not wash the sensor with water.
- Do not disassemble, rebuild or repair the sensor yourself, otherwise electric shock may occur.
- When the operation indicator blinks Green, contact your installer or service engineer.
- Always contact your installer or service engineer when changing the settings.
- Do not paint the detection window.

NOTE 1. When turning the power ON, always walk-test the detection area to ensure the proper operation.
 2. Do not place any objects that move or emit light in the detection area. (e.g. Plant, illumination, etc.)

TROUBLESHOOTING

Door operation	Operation indicator	Possible cause	Possible countermeasures
Door does not open when a person enters the detection area.	None	Wrong power supply voltage. Wrong wiring or connection failure.	Set to the stated voltage. Check the wires and connector.
	Unstable	Wrong detection area positioning. Sensitivity is too low. Short presence timer. Dirty detection window.	Check ADJUSTMENTS 1, 2, 3. (*) Set the sensitivity higher. (*) Set the presence timer longer. (*) Wipe the detection window with a damp cloth. Do not use any cleaner or solvent.
	Proper	Wrong wiring or connection failure.	Check the wires and connector.
Door opens when no one is in the detection area. (Ghosting)	Unstable	Objects that move or emit light in the detection area. The detection area overlaps with that of another sensor. Waterdrops on the detection window.	Remove the objects. Check ADJUSTMENTS 3-3. (*) Use the rain-cover. (Separately available) Or wipe the detection window with a damp cloth. Do not use any cleaner or solvent. Or install in a place keeping the waterdrops off.
	Proper	The detection area overlaps with the door/header. Sensitivity is too high. Others	Adjust the detection area to "Deep" (Outside). Set the sensitivity lower. (*) Set dipswitch 9 to "ON". (*)
	Proper	Wrong setting of dipswitches.	Check ADJUSTMENTS 3-7, 3-8, 3-10. (*)
Door remains open	Proper	Sudden change in the detection area.	Check ADJUSTMENTS 3-1, 3-2. (*) If the problem still persists, hard-reset the sensor. (Turn the power OFF and ON again.)
	Yellow	Wrong wiring or connection failure. Installation mode is set to "ON".	Check the wires and connector. Set dipswitch 16 to "OFF". (*)
	Fast Green Blinking	Sensitivity is too low. Dirty detection window. Sensor failure.	Set the sensitivity higher. (*) Wipe the detection window with a damp cloth. Do not use any cleaner or solvent. Contact your installer or service engineer.
	Slow Green Blinking	Signal saturation. (1st or 2nd row) The detection area overlaps with the door/header.	Remove highly reflecting objects from the detection area. Or lower the sensitivity. (*) Or change the area depth angle for 1st to 3rd rows. Adjust the detection area to "Deep" (Outside).
Proper operation	Red & Green Blinking	Setting error.	After changing the dipswitch settings, make sure to push the function switch for 2 seconds.
	Slow Green Blinking	Signal saturation. (3rd, 4th or 5th row)	Remove highly reflecting objects from the detection area. Or lower the sensitivity. (*) Or change the area depth angle.

* After changing the dipswitch settings, make sure to push the function switch for 2 seconds.

Manufacturer

OPTEX Co.,LTD.

5-8-12 Ogoto Otsu 520-0101, Japan
 TEL.: +81(0)77 579 8700 FAX.: +81(0)77 579 7030
 WEBSITE: www.optex.co.jp/as/eng/index.html

European Subsidiary

OPTEX Technologies B.V.

Tiber 2, 2491 DH The Hague, The Netherlands
 TEL.: +31(0)70 419 41 00 FAX.: +31(0)70 317 73 21
 E-MAIL: info@optex.nl WEBSITE: www.optex.nl

North and South American Subsidiary

OPTEX Technologies Inc.

Corporate Headquarters
 18730 S. Wilmington Ave. Suite 100 Rancho Dominguez,
 CA 90220 U.S.A.
 TOLL-FREE: 800 877 6656 FAX.: +1 310 214 8655
 WEBSITE: www.optextechnologies.com

East Coast Office

8510 McAlpines Park Drive, Suite 108 Charlotte,
 NC 28211 U.S.A.
 TOLL-FREE: 800 877 6656 FAX.: +1 704 365 0818
 WEBSITE: www.optextechnologies.com